



House Parts

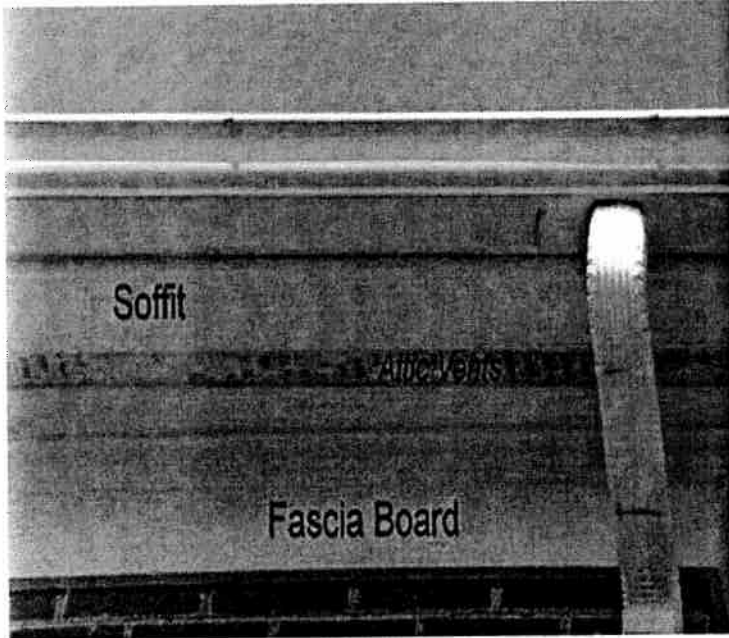

Fascia Boards are the vertical boards on a house, and **soffits** are horizontal.

On the interior units there are **attic vents** placed within the soffit. These are necessary for the ventilation of your attic, and you should try to keep your painter from stopping up the air passages in the vents. Some vents have been replaced as they were no longer working, and may not look like the ones in the picture.

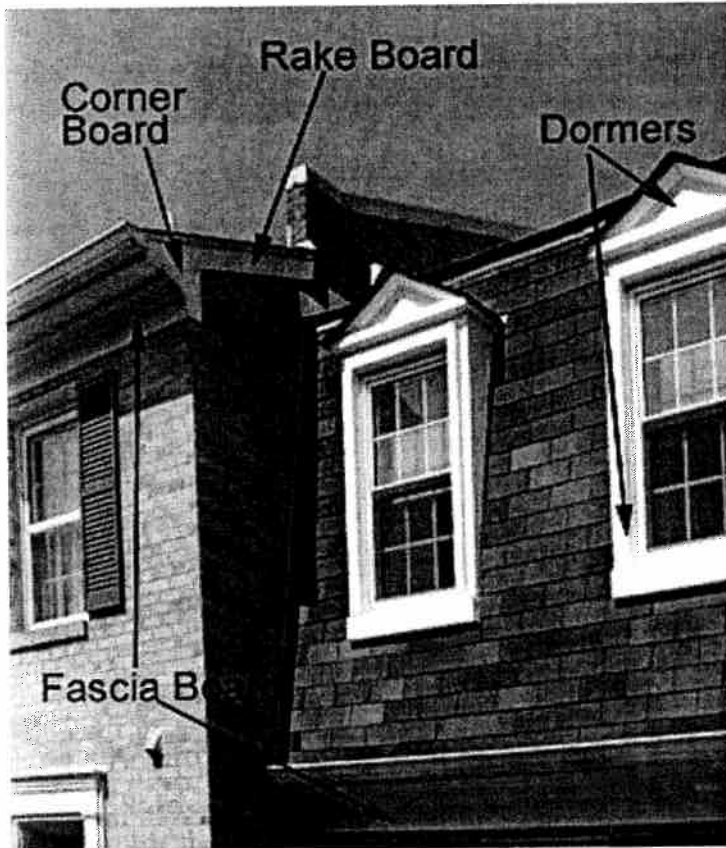

This is another view of a fascia board.

There are **rake boards** of various lengths on our houses. They are easy to miss when inspecting your house for painting as sometimes you have to stand quite a distance away to see your rake board -- particularly in the back of your house. As the exposure is different from the main painted part of your house, the paint breaks down at different times.

The corner board finishes off the rake board.

As mentioned earlier, some **rake boards** can be quite long, extending the whole length of the roof. Also, another view of the **corner board**.

